

ODEON APPLICATION NOTE – ISO 3382-3 Open plan offices – Part 2 Measurements

JHR, May 2014

Scope

This is a guide how to measure the room acoustical parameters specially developed for open plan offices according to the international standard ISO 3382-3:2012 Acoustics – Measurement of room acoustic parameters – Part 3: Open plan offices [1].

The method is intended for furnished rooms, i.e. the room model must include tables, bookshelves, screening elements etc., but with no people present.¹ The results can be used to evaluate room acoustical properties in open plan offices and it may be used for comparison of alternative solutions in design or acoustical treatment.

This application note refers to ODEON version 12 and later, all editions.

Method

The principle is to measure the sound propagation from a sound source to a number of receivers that are located in different distances from the source, which must be omnidirectional, and have a standardised sound power spectrum of normal speech. Both the A-weighted sound pressure level (SPL) and the speech transmission index (STI) are measured, and a number of acoustical parameters are derived from the results. The positions of sources and receivers must correspond to actual work stations in the furnishing plan.

In order to define the relative distances between sources and receivers, it is necessary to create a dummyroom with sources and receivers. Of course it is also possible to create a more accurate model of the office in question, but it is not necessary for doing the measurements.

The results using this method are influenced by the volume, the amount of sound absorption, the use of screens and level of background noise. Examples of variation of these parameters are found in ref. [2].

Terms and definitions

Background noise level

sound pressure level in octave bands during working hours, but not including noise caused by people, spatially averaged over the work stations.

Sound power spectrum of normal speech

sound power level in octave bands emitted by a human speaker at normal vocal effort, as defined in ANSI 3.5 [3] and assuming a directivity as in [4].

¹ When modelling furniture, make sure you follow some basic rules mentioned in Chapter 3 in the ODEON manual. In principle surface dimensions should be kept larger than 30 cm.





Spatial decay rate of speech

 $D_{2,S}$ rate of spatial decay of A-weighted sound pressure level of speech per distance doubling.

A-weighted sound pressure level of speech at a distance of 4 m

 $L_{p,A,S,4}$ m

nominal A-weighted sound pressure level in a distance of 4 m, when an omnidirectional sound source emits a sound power spectrum of normal speech, obtained using a linear regression line through a series of measurement positions.

Distraction distance

 $r_{\rm D}$ distance from speaker where the STI falls below 0,50.

Privacy distance

 $r_{\rm P}$ distance from speaker where the STI falls below 0,20.

Room conditions

According to the standard, the test report shall include a sketch of the room plan with indication of scale and, if relevant a section of the room. A drawing/floor plan showing source and receiver position is required. In ODEON this can be accomplished by making a simple model of the room e.g. in the 3D extrusion modeller.

The room model can be a simple box, big enough to contain the sources and receivers. The model needs not to include precise materials or furniture. It is suggested to assign material No 20 to all surfaces, or any other material. The absorption coefficients are not important in this case. An example is shown in Fig. 1.





Figure 1. Example of simple room model used only to define relative position of sources and receivers.



Background noise

The background noise level is one of the important parameters in these measurements. It is applied for the STI calculations, and thus the background noise level has a direct influence on the distraction distance and the privacy distance. According to ISO 3382-3 the background noise shall represent the HVAC² devices and other noise sources operating as during typical working hours. If the office is equipped with a sound-masking system, this shall be applied for the background noise. If the background noise varies with position, the average over all receiver positions shall be applied. Background noise in octave bands must either be measured with an ordinary sound level meter, or the data must be taken from the room specifications. The data shall be entered in the room setup (see the example in Fig. 2). It is not necessary to give data for the 63 Hz octave band, as this frequency band is not used for the simulations.

🙀 Room setup		
Calculation parameters Air condition	ns /STI parameter/model check (only 125-8000 Hz for STI calcu	ulations)
Noise at 63 Hz octave band	-99,0 dB	Total levels
Noise at 125 Hz octave band	44,6 dB	Linear 47,1 dB A-weighted 40,0 dB(A)
Noise at 250 Hz octave band	41,0 dB	Background noise levels
Noise at 500 Hz octave band	37,4 dB	40 30
Noise at 1000 Hz octave band	^{35,2} dB	20
Noise at 2000 Hz octave band	30,0 dB	0
Noise at 4000 Hz octave band	24,0 dB	-20
Noise at 8000 Hz octave band	22,6 dB	5 -30 -40 -50 -60 -70 -80 -90
	1 dB	
		Frequency (Hz)
Model check Max accept, Warp	n o tol m	
Max accept. wall overlap	0,050 m	
Air conditions		
Disable air absorpton	Temperature Relative humidity	20,00 °C 50,00 %

Figure 2. Example of background noise entered in octave bands, and with the A-weighted sound pressure level of 40 dB(A).

² Heating Ventilation and Air Conditioning



Background noise from people talking and other activities (the dynamic background noise) shall not be applied for the measurements, in accordance with the standard, but it may be used for a supplementary calculation using the same measured impulse responses.

Sound sources

An omnidirectional sound source is used, and the spectrum and sound power is defined in order to represent speech at normal vocal effort. The spectrum is based on ANSI 3.5 [3].

Unless the ODEON model is also to be used for simulations, there is no need to specify any particular source. The default omni-directional source will do for the measurements.

At least two sound source positions shall be used. Each sound source shall be at the end of a group or line of receivers (see next section). The same line of receivers may be used twice with a sound source in each end of the line.

Sound sources are placed in typical workstations, and the height shall be 1.20 m above the floor, representing seated persons.

Receivers

The receivers are also located in typical workstations at a height of 1.20 m above the floor. The receivers shall be arranged in such a way that each group of receivers are related to one source position. Each group must consist of minimum 4 receivers, and preferably between 6 and 10 receivers approximately on a line. The workstation on the line that is nearest to the source shall be used for the first measurement position. The distance to the most remote receiver position depends of the size of the room; however, only positions within the range 2 m to 16 m are used for the determination of the spatial decay rate of speech. This is automatically managed by ODEON. NB: At least 4 receivers must be within the range 2 m to 16 m.

The groups of receivers are set up in the Job list/Multi point response parameters/3D sources and Receivers. NB: There must be one job for each sound source.

Calibration of sound source

The measurement equipment is put together, and a calibration of the sound source has to be performed, with the correct settings of volume controls and whatever has an influence on the emitted sound power. The reverberation room method is recommended; see the ODEON Application Note [4].

If a real reverberation chamber is not available, any empty room without sound absorbing materials may be sufficient. The volume of the room must be known. The procedure is very simple; just choose two loudspeaker positions and three microphone positions (none of them too close to walls or to the loudspeaker) and use ODEON to create a sine-sweep in each of the six combinations of source/receiver positions. Keep these six impulse response files in a separate folder for easy access later on.

The calibration file to be used for the measurements is derived by clicking on Tools/Calibrate Measurements/Diffuse field Calibration. First the volume of the reverberant room must be entered, and then ODEON asks for the impulse response files to be used for the calibration, see Fig. 3.



6 Open calibrati	on measuremer	nt files						×
Look <u>i</u> n:	📔 Reverb Room 👻				G 💋	1 🖻	 •	
(Ca	Name	Artists	Album	#	Ger	nre		»
	퉬 calibrated	measurement						
Recent Places	🔊 s1r1.wav							
	🔊 s1r2.wav							
Deckton	🔊 s1r3.wav							
Desktop	s2r1.wav							
	s2r2.wav							
JHR	s2r3.wav							
Computer								
Network							_	
	File <u>n</u> ame:	"s2r3.wav" '	's1r1.wav" "s1r2.	wav"	"s1r3.wa	v" 🔻		<u>O</u> pen
	Files of type:	Wave file				-		Cancel

Figure 3. The wave files to be used for the calibration are selected (using Shift + left mouse key or arrow up/down to select subsequent files or Ctrl + left mouse key to select multiple individual files).

The selected impulse responses are loaded as a bunch and the average SPL and reverberation times are automatically derived in order to create the calibration file, see Fig. 4. Finally, you are prompted to give the calibration file a name, so you can easily indentify the file later on. (The calibration file is saved in the Application data folder, which is accessible from Options/Explore Application data folder).

You can make the calibration active from now on, or you can activate it later. In ODEON it is possible to apply the calibration after having performed the measurements in the office. This is done from Tools/Calibrate Measurements/Assign calibration to existing measurements.



6	C ODEON 12.15 Combined - <no assigned="" room=""></no>												
<u>F</u> ile	Eile Toolbar SPL and T30 calibration values Options Tools Window Help												
6	🗠 🔯 튭 🎒 🔟 🌆 ኬ 🗱 🔐 🕕 🌒 🖷 🕲 帐 🧮 🖏 👬 வ 🧱 🧱 🧱 🧱 🎼 🌜 🤹 🔤 🖉 🖉 🖉 🗠 Licensed to: Odeon A/S 🛛 User id												
R	Measured response - C:\\Measurements\DTU kalibrering and revtest\ Image: Comparison of the comparison of									Room Accusate www.odec			
				I R	Measured res	ponse - C:\\M	leasurements\D	TU kalibrering	and revtest\		(Server &		
					Raw Impulse resp	ionse at 1000Hz	Raw decay cu	irve at 1000Hz	Decay curves	at 1000Hz 🔺 🕨			
1					C:\\Measurem	Ray Impulse	ering and revtes response at 100	t\ReverbRoom\9 0Hz	s2r3.wav				
Å	* 1				7 864	-			🔽 — Omni	i microphone			
	Υ	4			6,554				Onse	et time		W	ww.ode
		ч	4- U V		5,243					catorranic	(Jones)		
6	S SPI	. and	I T30) cali	bration values								
				File n	ame	SPL@63 Hz	SPL@125 Hz	SPL@250 Hz	SPL@500 Hz	SPL@1000 Hz	SPL@2000 Hz	SPL@4000 Hz	SPL@8000 Hz
				s 1r 2.	wav	-46,66	-27,93	-23,90	-27,78	-28,41	-26,74	-29,82	-31,03
				s 1r 1.	wav	-47,41	-27,95	-23,36	-27,23	-28,06	-26,40	-29,44	-31,56
	s1r3.wav			wav	-47,42	-27,26	-23,72	-27,79	-28,33	-26,45	-29,70	-31,71	
	s2r1.wav				wav	-46,46	-28,55	-23,98	-27,97	-27,84	-26,05	-29,57	-31,13
				s2r2.	wav	-48,49	-28,02	-24,49	-27,89	-28,22	-26,09	-29,69	-32,30
				s2r3.	wav	-48,40	-27,77	-24,33	-27,98	-28,60	-26,65	-29,83	-32,13
	Average			age	-47,41	-27,90	-23,95	-27,77	-28,24	-26,39	-29,67	-31,62	
	- Calibration			ation	46,37	26,86	22,39	25,52	24,80	21,71	23,03	22,01	
Ľ													
•						111							۶.

Figure 4. The bunch of wave files to be used for the calibration have been loaded and the calibration values have been calculated.

Measure impulse responses

When the equipment is ready in the open-plan office, open the ODEON room with the sources and receivers and go to the Options/Program setup/Measurement setup.

Under Source Power Spectrum, click the button "Speech – ISO 3382-3" to select the speech spectrum according to the standard, see Fig. 5. Make sure the proper calibration file is selected. Close the window and accept changes.

Now, put the sound source and the microphone in the previously selected positions and perform a sine sweep measurement in each position.



6 Program setup					
Paths Auralisation Graphics exchange	Printer options Grid colours Measurement setup Other settings				
Measurements files	Parameters for detection of onset time				
	Noise floor window length 50 ms Decay slope ratio 140.0 %				
₩c:\ F=1ff21ef5226d8518b95c06f00d					
- 3ee65b281e68e5bd93f752227	Sweep model				
- 75e8392316d7208b5ect3a3ct - 77ef048d50d637695158ba93a	Sweep type Exponential sweep (pink)				
- 7906950c1feb704bbe82					
- 85346c3fceeba1402f6c20758a	Receiver model				
- Ca231b4c7e425794ad3a3f7	Receiver type 1 Channel: Omni				
- backup					
- 0 db2aba814f69365288a4768d - 0 dell	Audio devices				
- Codoctemp					
- Deee8e2610a6b4836e814920bc	a por device				
- amleodeoninstallationerfrax_r	Output device Speakers (Realtek High Definiti				
- hp ljp2015 pd5	WARNING calibrated devices not matching selected I/O: Line In (Saffire 6 USB) / Line Out (Saffire 6 USB)				
- Chp universal print driver	Calibration file cal file test 20140522.Calibration				
- Cintel					
- Codeon 11 combined	Source Power Spectrum				
- Contraction -	Frequency 63 125 250 500 1000 2000 4000 8000 Hz G-ISO 3382-1				
- Circles	Sound power -99,00 60,90 65,30 69,00 63,00 55,80 49,80 44,50 dB Speech - ISO 3382-3				
- Cheadandphones	Back ground noise spectrum (for RASTI, STI,U(50))				
- measurements	Frequency 63 125 250 500 1000 2000 4000 8000 Hz				
- mooms - move signals	Background noise -999,00 -999,00 -999,00 -999,00 -999,00 -999,00 -999,00 -999,00 dB				
- Cold_jhr_xp_pc	(when a room is assigned, the level of background noise is not specified here but in the room setup)				
- program files	(men a roun is assigned, the rever of background noise is not specified here but in the roun setup)				
- Dusers -	Decay curve settings (only used if no room is assigned)				
4	Impulse response resolution				
	3,0				
	External adjustments				
	Gain 0,00 dB				

Figure 5. The measurement setup: The calibration file and the speech spectrum are selected.

Import impulse responses to ODEON

When the measurements in the office are finished, the impulse responses are imported into ODEON as described in the following.

Open the Job list I and select one of the jobs. Make sure the proper source is selected for that job (only one source in each job). Tick mark for Multi point response, and click on View Multi point response. See the example in Fig. 6.





Figure 6. The simplified room model with source no 1 assigned to job no 1 and Multi point response activated.

Open the Load impulse response (Ctrl+Shift+L) and select the bunch of impulse responses measured with the source in the first job, see Fig. 7. Multiple files can be selected in the open dialog using Ctrl or Shift and Arrow key or Mouse.





Figure 7. A bunch of impulse responses have been opened.

Now press Ins (or Ctrl+Ins) to assign each impulse response to a certain source-receiver combination, see Fig. 8.

o Add measured point parameters to job.						
Job number	C:\Odeon12Combined\Measurements\Impulse response file.ImpRespFile4.wav					
Job number	•					
Receiver number	4					
	Cancel					

Figure 8. Make sure that the impulse response is assigned to the right job number (source position) and receiver position before clicking OK.





Results

From the Job list, the Multi point response is opened, see Fig. 3. Since no simulations have been made, the results shown are all related to the measurements (Measured mode).

In the Multi Point Response there are three windows with results that are relevant for the open plan office: Spatial Decay curves, STI versus distance, Energy parameters (see Fig. 9).



Figure 9. Multi Point Response. The results are displayed in the windows marked in red.

Having selected the appropriate group of receivers (see above), the page with Spatial decay curves displays the spatial decay rate of speech and the two parameters derived from that curve, $D_{2,S}$ and $L_{p,A,S,4m}$. NB: There are several spatial decay graphs on this page; use the up/down arrows to select the right graph. An example is shown in Fig. 10.

NB: Results will only show when one and only one point source is turned on in the job. In addition, none of the receivers in the selected group of receivers should coincide with the source position.

On the next page is a graph showing the spatial sound distribution of the STI parameter, and the regression line used to calculate the distraction distance and the privacy distance, see the example in Fig. 11. It is noted that the privacy distance can exceed the largest dimension of the room, typically in cases with no screens and low background noise. In other cases with efficient screens and high background noise it may occur that the distraction distance cannot be derived, simply because the STI values are below 0,5 in all distances from the source.





Figure 10. The spatial decay rate of speech: Note that only receivers within the range from 2 m to 16 m are used for the calculation of the regression line. Receivers 5 and 6 are outside this range. NB: There are several different frequency ranges available in this window; click arrow up/down to get this graph.



Figure 11. The spatial sound distribution of STI and the regression line used to calculate r_D and r_P. In this example the STI values are so low that $r_{\rm D}$ cannot be calculated.



The page with energy parameters displays the results in each position and the statistics from the selected group of receivers. At the bottom are found the ISO 3382-3 parameters, see the example in Fig. 12. Use Ctrl + A to export the results to a text file, which can be further copied into a spreadsheet or a table in a document, see Table 1. For the evaluation of results, Annex A of ISO 3382-3 provides some examples of target values, see Table 2.

CODEON 12.15 Combined - C:\Odeon12Combined\Roc	ms\Simple office C (Geometry type: .Par)
<u>File T</u> oolbar Energy_Parameters <u>O</u> ptions Too <u>l</u> s <u>W</u>	indow <u>H</u> elp
🗠 🖏 🎼 📇 🎞 🏧 🦕 🚟 🔐 🜒 🛥 🕮 🐠	🗄 🔜 🐘 🗱 🚳 🔊 📐 🤍 🌫 🧏 🔀 🔛 🕅 🎇 🞇 🖁 😽 😽 🔓 Licensed to: Odeon A/S 🛛 User id
Multi point response parameters - job 1 (Measured mo	ode) 🗖 🗖 🔁 👘
Spatial decay curves STI versus distances Noise	control Energy parameters Measured versus Simulated
ISO 3382-3 parameters STI(nearest) = 0,38	source is requiered to have speech spectrum) STI at nearest work station)
rD = *,** metres	distraction distance)
D2,S = 7,94 dB	(Spatial decay rate of A-weighted SPL of speech, 125-8000 Hz)
Lp,A,S, $4 \text{ m} = 46,32 \text{ dB}$	(A-weighted speech at 4 metres, 125-8000 Hz)
	••••••••••••••••••••••••••••••••••••••
	v IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII

Figure 12. The results as they appear in the bottom of the page with energy parameters.

Table 1. Example of results with ISO 3382-3 parameters for one sound source position exported from ODEON to a document.

STI (nearest)	0,38	(STI at nearest work station)
r _D	***	(distraction distance)
r _P	11,65	(privacy distance)
D _{2,S}	7,94	(Spatial decay rate of A-weighted SPL of speech, 125-8000 Hz)
L _{p,A,S, 4 m}	46,32	(A-weighted speech at 4 metres, 125-8000 Hz)
L _{p,A,B}	40,04	(A-weighted background noise, 125-8000 Hz)

Table 2. Example of results with ISO 3382-3 parameters for one sound source position exported from ODEON to a document.

Parameter		Poor	Good
Spatial decay rate	D _{2,S}	< 5 dB	≥7dB
SPL(A) at 4 m	L _{p,A,S,4 m}	> 50 dB	≤ 48 dB
Distraction distance	r _D	>10 m	≤5m



References

- 1. ISO 3382-3:2012 Acoustics Measurement of room acoustic parameters Part 3: Open plan offices. International Organization for Standardization, Geneva, Switzerland (2012).
- 2. J.H. Rindel and C.L. Christensen: "Acoustical simulation of open-plan offices according to ISO 3382-3". Proceedings of Euronoise 2012, Prague, Czech Republic (2012).
- 3. ANSI 3.5-1997. American National Standard Methods for Calculation of the Speech Intelligibility Index, (1997).
- 4. ODEON Application Note. Calibration for Impulse Response Measurements. Part 1 Diffuse Field Method. 2013.